



Spare parts list 418-1031

N°	Name of spare parts	ref
1	Aluminum body	
2	Rubber pad	
3	Motor	418-5335
4	Big gear A	
5	Small gear B	
6	Sheath	
7	Gear box	
8	Screw	
9	Seal ring	
10	Big gear B	
11	Bearing	
12	Oil seal	
13	Output axis	
14	Seal ring	
15	Cutting chamber	
16	Feeder pan	
17	Pusher	418-5320
18	Cast iron mincer head	
19	Locking nut	418-5345
20	Locking seat	
21	Plunger	
22	Spiral propeller	
23	Holder	
24	Cross knife	418-5300
25	6mm Hole plate	418-5305
26	8mm Hole plate	418-5307
27	Coupling cover	418-5325
28	Sausage tube	418-5475
29	Power cord	
30	Clamp of power cord	

N°	Name of spare parts	ref
31	Switch	418-5470
32	Reset	
33	PCB	
34	PCB bracket	
35	Contacteur	
36	Capacitor	
37	Capacitor clamp	
38	Bottom plate	
39	Rubber feet	418-5105