

INSTRUCTION MANUAL

SOUP POT REF : 860083



To ensure proper use of this appliance and your safety, please read the following instructions completely before operating this appliance.

English – Original



TECHNICAL SPECIFICATIONS

Model	Capacity	Volt (V)	Power (W)	Measures (mm)	Weight (kg)
860083	10 L	220V-240V	400	H-39 cm / ø-34.5 cm	4.5

OPERATING AND MAINTENANCE

- Plug unit into correct electrical socket.
- Use with WET HEAT ONLY. Add 0.6L of water between the stainless steel liner and internal Aluminum container. Never overfill with water and under no circumstances should the stainless steel liner float up, even when empty. Remove any excess water immediately.
- The temperature control should be set between 1 and 8 and always operate the kettle at the lowest setting to maintain correct serving temperature. Hold at high temperature when setting between 8 and 12.
- A neon light will glow when the unit is turned on. Turn the dial to 0 to switch off. Unplug from the wall socket to isolate kettle from the electrical supply.
- Always keep the removable hinged lid attached and in the closed position when not serving.
- Never move or carry the kettle when unit is switched on, or containing hot food.
- Spilled food should be removed immediately from all exterior surfaces. The stainless steel bain marie and lid are machine washable. The painted exterior and top collar should be wiped over with a damp soapy cloth.
- Ensure unit is unplugged when not in use, when filling and when being cleaned.
- The kettle must not be cleaned with a high pressure jet.

**IMPORTANT : NEVER IMMERSE KETTLE WATER AS DAMAGE TO THE UNIT WILL RESULT AND THE GUARANTEE WILL BE VOIDED.
WARNING THIS APPLIANCE MUST BE EARTHED. DO NOT OPERATE KETTLE EMPTY.**

STANDARDS AND DIRECTIVES

Meaning of crossed out wheeled dustbin:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Contact your local government for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.

The device complies with current EU standards and directives. If necessary, we will send you the corresponding declaration of conformity.

Packaging disposal

Please separate the packaging materials accordingly and return them to the responsible collection points for recycling and environmental housing.



Device disposal

once the appliance has been used up, dispose of it properly at a collection point for electrical appliances. Electrical appliances do not belong in household waste.

Your responsible administration will inform you about the addresses and opening hours of collection points. This is the only way to ensure that old appliances are properly disposed of and recycled. Thank you very much!





CE