



EXPLODE OF HT200R

SPARE PARTS LIST OF HT200R

NO	CODE	NAME	MODEL	QTY	MATERIAL	REMARK
01	HT200R.01	UP HINGE COVER		1PC		
02	HT200R.02	UP HINGE		1PC		
03	HT200R.10	BUSHING		2PCS		
04	HT200R.03	THERMOSTAT	ECS-10HT1	1PC		
05	HF200.03	GASKET		1PC		
06	HT200R.04	DOOR		1PC		
07	HF600.19	HINGE AXIS	Φ7	2PCS		
08	HF600.08	DOWN HINGE		2PCS		
09	HR400.05B	BOTTOM SHELF		1PC		
10	HR400.05A	SHELF		2PCS		
11	HR600.06	EVAPORATOR FIXER		3PCS		
12	HR200.04	EVAPORATOR		1PC		
13	HT200RG.01	LOCK		1PC		
14	S900.13	FEET		2PCS		
15	HT200RG.02	LOCK SUPPORT		1PC		
17	HT200R.05	BODY		1PC		
18	S900.47	PLUG		1PC		
19	HT200R.06	CONTROL BOX		1PC		
20	VRX.18Z	COMPRESSOR	OF789	1PC		
21	HF400.08	UNITE BOARD		1PC		
22	HR110.06	CONDENSER		1PC		
23	HR600.10	CONDENSER FAN SUPPORT				
24	S900.34	CONDENSER FAN	SA1238A2	1PC		
25	HF400.10	UNITE ROOM GRILLS		1PC		
26	S900.40A	WATER BOX		1PC		
27	HR200.10	CIRCUIT FAN	ZYD-2J	1PC		
29	HR400.02	CIRCUIT FAN SUPPORT		1PC		
30	S900.31	SENSOR FIXED CLIP		1PC		
31	S900.32	SENSOR		1PC		
32	HT200R. 07	TOP COVER		1PC		
33	HT200R.08	PLASTIC CAP		3PCS		
34	SC300.18	HANDLE		1PC		