



EXPLODE OF HT600R

SPARE PARTS LIST OF HT600R

NO	CODE	NAME	MODEL	QTY	MATERIAL	REMARK
01	HT200R.01	UP HINGE COVER		1PC		
02	HT200R.02	UP HINGE		1PC		
03	HT200R.10	BUSHING		2PCS		
04	HT200R.03	THERMOSTAT	ECS-10HT1	1PC		
05	HF600.06	GASKET	1692*747	1PC		
06	HT600R.01	DOOR		1PC		
07	HF600.19	HINGE AXIS	Φ7	1PC		
08	HF600.08	DOWN HINGE		2PCS		
09	HR600.02A	SHELF	650*525	3PCS		
10	HR600.02B	BOTTOM SHELF	650*330	1PC		
11	HR600.06	EVAPORATOR FIXER		5PCS		
12	HR600.04	EVAPORATOR	100*580	1PC		
13	HT600R.02	BODY		1PC		
14	HT200RG.01	LOCK		1PC		
15	HT200RG.02	LOCK SUPPORT		1PC		
17	S900.13	FEET		2PCS		
18	S900.47	PLUG		1PC		
19	HT200R.06	CONTROL BOX		1PC		
20	S900.41Z	COMPRESSOR	OF1350A	1PC		
21	HF600.12	UNITE BOARD		1PC		
22	S900.34	CONDENSER FAN	SA1238A2	1PC		
23	HR600.10	CONDENSER FAN SUPPORT		1PC		
24	HR110.06	CONDENSER		1PC		
25	S900.40A	WATER BOX		1PC		
26	HF600.13	UNITE ROOM GRILLS		1PC		
27	HR600.01	CIRCUIT FAN SUPPORT		1PC		
28	HR200.10	CIRCUIT FAN	ZYD-2J	1PC		
29	S900.31	SENSOR FIXED CLIP		1PC		
30	S900.32	SENSOR		1PC		
31	HT600R.03	TOP COVER		1PC		
32	HT200R.08	PLASTIC CAP		3PCS		
33	HT300R.01	HANDLE		1PC		