



EXPLODE OF HT200F

SPARE PARTS LIST OF HT200F

NO	CODE	NAME	MODEL	QTY	MATERIAL	REMARK
01	HT200R.01	UP HINGE COVER		1PC		
02	HT200R.02	UP HINGE		1PC		
03	HT200R.10	BUSHING		2PCS		
04	HT200R.03	THERMOSTAT	ECS-10HT1	1PC		
05	HF200.03	GASKET		1PC		
06	HT200R.04	DOOR				
07	HF600.19	HINGE AXIS	Φ7	2PCS		
08	HF600.08	DOWN HINGE		2PCS		
09	HF400.05	EVAPORATOR SUPPORT		3PCS		
10	HF200.06	EVAPORATOR		1PC		
11	S900.13	FEET		2PCS		
12	HT200F.01	BODY		1PC		
13	HT200RG.01	LOCK		1PC		
15	HT200RG.02	LOCK SUPPORT		1PC		
16	S900.47	PLUG		1PC		
17	HT200R.06	CONTROL BOX		1PC		
18	HF200.11Z	COMPRESSOR	OF1033A	1PC		
19	HF400.08	UNITE BOARD		1PC		
20	HR110.06	CONDENSER		1PC		
21	HR600.10	CONDENSER FAN SUPPORT		1PC		
22	S900.34	CONDENSER FAN	SA1238A2	1PC		
23	AB200F.02	UNITE ROOM GRILLS		1PC		
24	HF600.14	EVAPORATOR FIXER		6PAIRS	PLASTIC	
25	S900.32	SENSOR		1PC		
26	HT200R.07	TOP COVER		1PC		
27	HT200R.08	PLASTIC CAP		3PCS		
28	SC300.18	HANDLE		1PC		