


# SPARE PART LIST / ESPLOSO BM

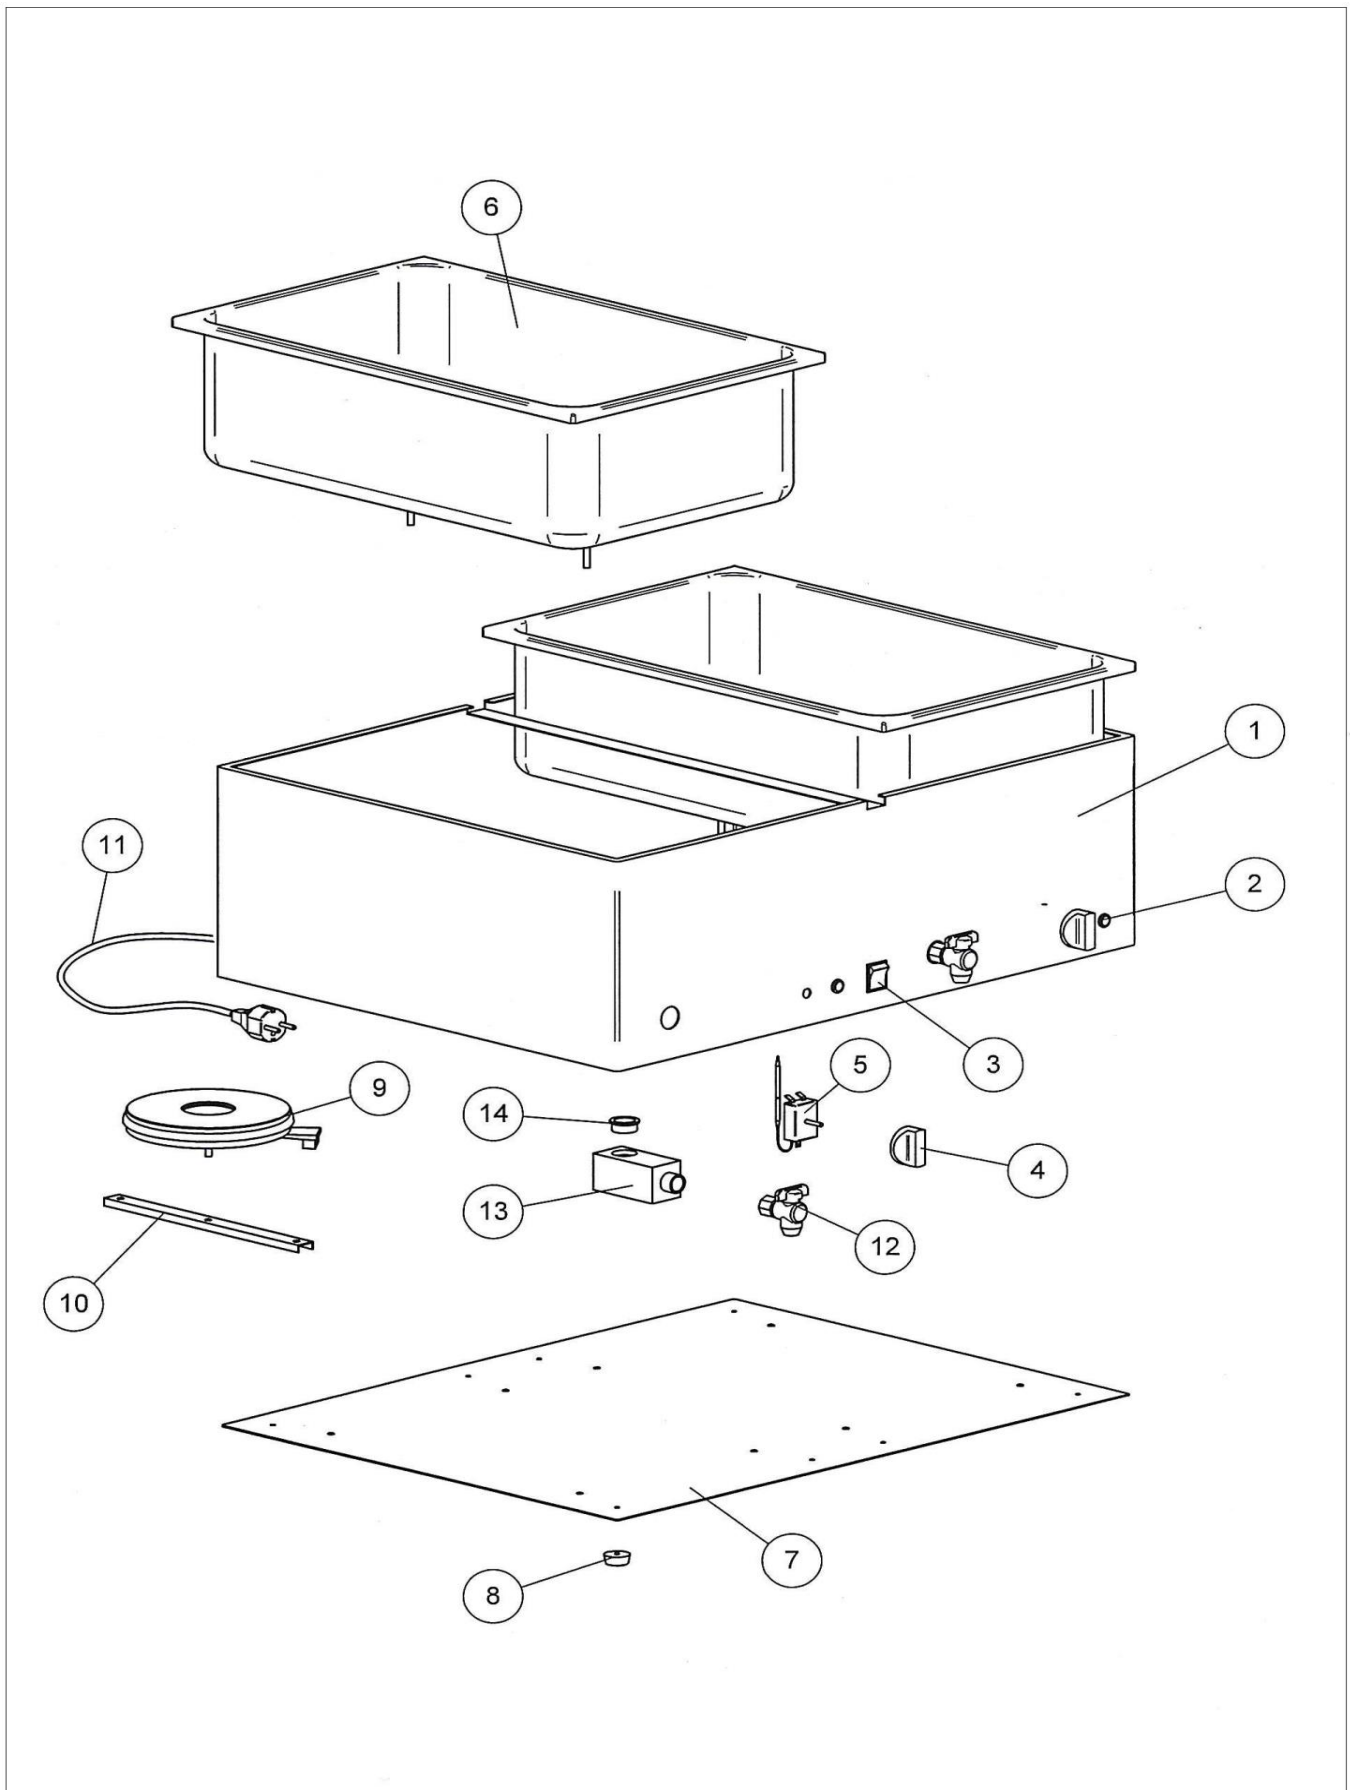

## SPARE PART LIST / ESPLOSO BM

REF.	CODE CODICE	DESCRIPTION	DESCRIZIONE	PRICE PREZZO
1		Chassis BM116	Carcassa BM116	
1		Chassis BM121	Carcassa BM121	
1		Chassis BM116R	Carcassa BM116R	
1		Chassis BM121R	Carcassa BM121R	
1		Chassis BM216	Carcassa BM216	
1		Chassis BM221	Carcassa BM221	
1		Chassis BM216R	Carcassa BM216R	
1		Chassis BM221R	Carcassa BM221R	
2	R00202	Orange light	Spia arancione	
3	R00203	Switch	Interruttore	
4	R00204	Knob	Manopola + ghiera	
5	R00205	Thermostat	Termostato	
6		Basin BM116-216	Vasca BM116-216	
6		Basin BM121-221	Vasca BM121-221	
6		Basin BM116R-216R	Vasca BM116R-216R	
6		Basin BM121R-221R	Vasca 121R-221R	
7		Button BM116-116R-121-121R	Fondo BM116-116R-121-121R	
7		Button BM216-216R-221-221R	Fondo BM216-216R-221-221R	
8	R00206	Foot	Piedino	
9	R00207	Heating element	Resistenza	
10		Support	Supporto	
11		Electric cable	Cavo elettrico	
12	R00208	Tap	Rubinetto	
13	R00304	Coupling	Manicotto	
14	R00305	Connection 1/2'	Raccordo 1/2'	