


7. EXPLODED VIEW

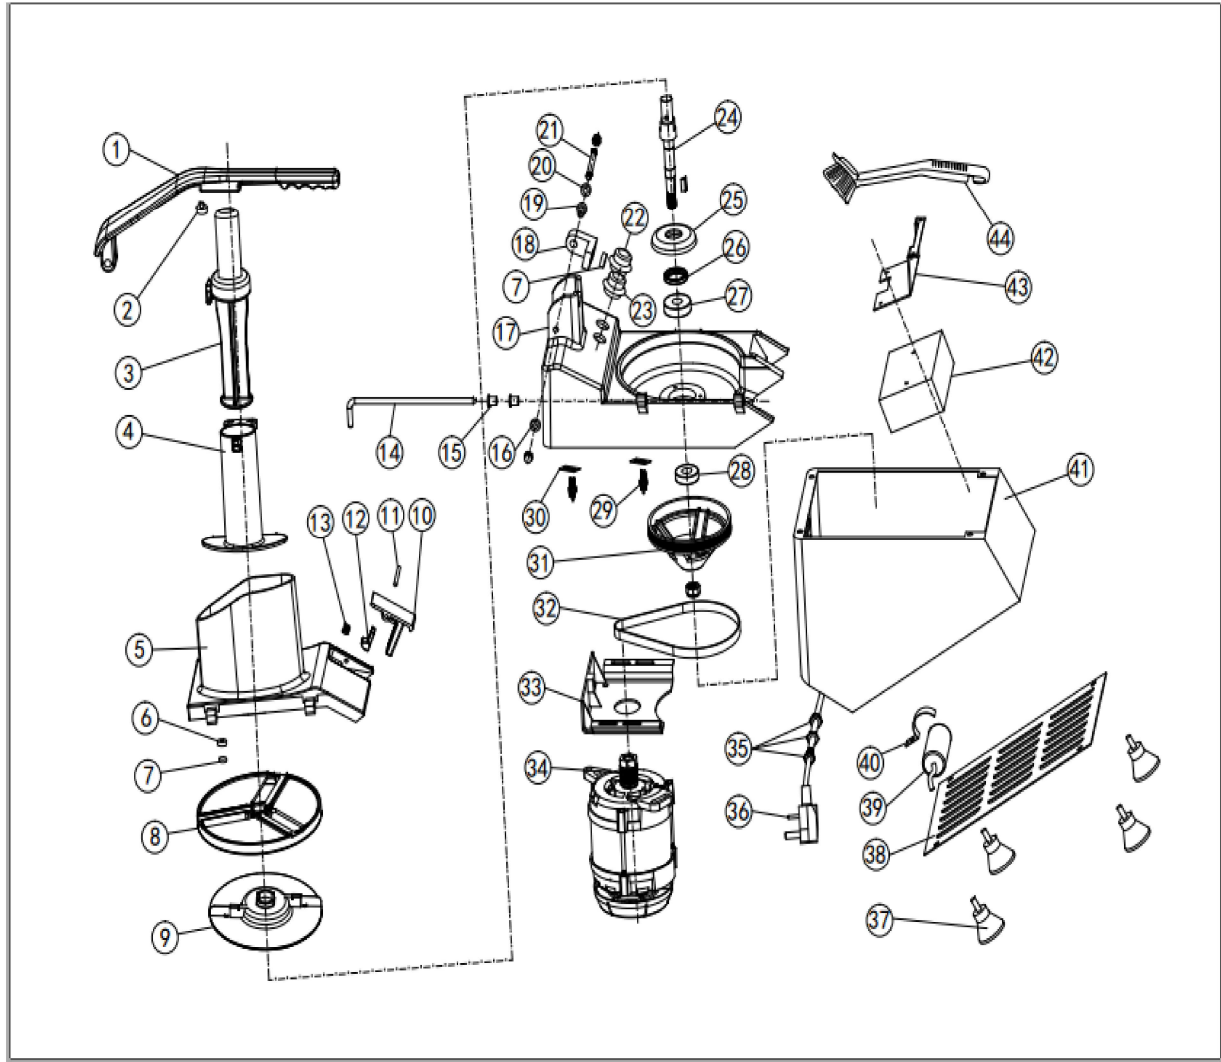

8-Spare Parts List

No.	Part Name	No.	Part Name
1	Guidon	23	on switch
2	Colloïde	24	output axis
3	Poussoir	25	bearing cover
4	Petite trémie d'alimentation	26	oil seal
5	Hopper	27	bearing
6	Seat of magnet	28	bearing
7	Magnet	29	micro switch
8	Slicer disc	30	fixing plate
9	Ejector	31	belt wheel
10	Locking handle	32	belt
11	Pin	33	support of motor
12	Hook	34	motor
13	Spring	35	cable tie
14	Hopper lid spindle	36	power cord
15	Spindle sleeve	37	foot
16	Stop collar	38	bottom plate
17	Body	39	capacitor
18	L type magnet seat	40	capacitor of clamp
19	Sleeve pipe	41	bottom base
20	Sleeve	42	electric box
21	Securing key	43	support of electric box
22	Off switch	44	brush