



- |  |                              |
|--|------------------------------|
| S 1 : Main switch                        | M 1 : Wash pump motor        |
| S 2 : Start switch                       | M 2 : Timer's motor          |
| S 3 : Door's cut off switch              | M 3 : Drainage pump motor *  |
| PS : Pressure switch                     | M 4 : Detergent pump motor * |
| R 1 : Boiler's/Booster's heating element | TH : Thermostat              |
| R 2 : Tank's heating element             | TF : Thermofuse              |
| H : Indicator lamp                       | TS : Timers microswitch      |
| Y : Water inlet valve                    | K : Relay                    |

\* OPTIONAL

### ELECTRICAL DIAGRAM

## EM-LV40

220-240 Volt AC 50/60 Hz

Max 2880 W 13 A