

SANDWICH PANINI GRILL
REF : 263655 / 26370



USE AND CARE MANUAL

SANDWICH PANINI GRILL REF : 263655 / 263709



Before operating this product, please read these instructions completely

L2G SAS 17, AVENUE DU 24 AOÛT 1944
BP90690-69969 CORBAS CEDEX
TÉL. : +33(0)4 72 23 23 98 FAX : +33(0)4 72 23 23 99



CONTENTS

External Structure & Parts List.....	3
Important features.....	4
Specifications.....	4
Operating instructions.....	5
Instructions for first use.....	5
Cleaning and maintenance.....	5
Troubleshooting.....	6
Daily check.....	7

 
Thank you for purchasing and using our Panini/Sandwich Grill. To make best use of this product and avoid damage and injury, please read this manual carefully before using the machine, and keep it handy for future reference. The Sandwich Grill design combines the advantages of stylish design, efficient construction, ease of operation and simple maintenance. The grill temperature can be easily adjusted to suit cooking requirements, and, while mainly used for sandwich grilling, the grill may be used for other foods.

WARNING : Any modifications or incorrect installation, unauthorized adjustments or maintenance by unauthorized personnel may result in property loss or injury. Please contact the supplier for any necessary adjustment or repair, which should only be done by trained professionals.


CAUTION : For your safety, do not place or store any flammable liquid or gas items near the sandwich grill.

WARNING : This equipment must be connected to a grounded power outlet for your safety.

EXTERNAL STRUCTURE & PARTS LIST

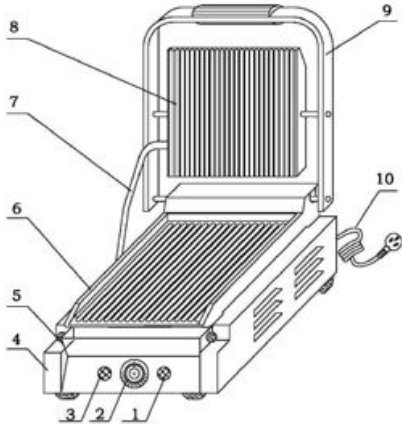

 1. Power Indicator
2. On/Off switch & temperature control
3. Heating cycle indicator
4. Lower body
5. Grease collector

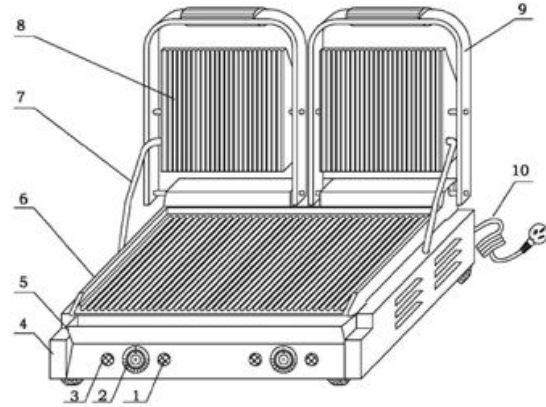

6. Lower grill
7. Feed wire protective tube
8. Upper grill
9. Handle
10. Power supply cord

Notes :

1. This product is intended for commercial use only.
2. Do not disassemble or modify the machine.
3. Lift the upper grill assembly smoothly; jerking it up may cause damage or injury.
4. Before cleaning, disconnect power and allow machine to cool.
5. Do not immerse in water or spray water onto the grills. Water may cause short circuit and injury or damage.
6. To avoid damage, do not jam materials onto the grill or place heavy objects there.
7. When the machine is in use, the body and grill plates are hot, and will cause burns if touched.
8. Do not use an ungrounded power supply cord.

Cautions :

1. It is recommended that the machine be unplugged during thunderstorms to avoid potential damage from nearby lightning strikes.
2. Avoid damaging the controls or grill surfaces with sharp or heavy objects.
3. Turn off power after daily use.
4. Do not use the machine with a damaged power cord.
5. Any internal repair or maintenance should be performed by a factory authorized repair technician.



IMPORTANT FEATURES

1. Convenient independent temperature controls are easy to set and may result in overall power savings (double unit).
2. Grill temperatures may be set for different uses at the same time (double unit).
3. External shell and grease collector tray are stainless steel.
4. The grills are designed to be easy to use and maintain.

SPECIFICATIONS

	SINGLE PANINI GRILL	DOUBLE SANDWICH GRILL
Model Number	263655	263709
Voltage	220~240V/50hz	220~240V/50hz
Power	2.2Kw	3.6Kw
Temp. Controls	1	2
Temp. Range	50~300°C	50~300°C
Upper Grill (overall)	338 x 218mm C	204 x 215 mm x 2
Lower Grill	360 x 283mm	498 x 283mm
Overall Size	440 x 440 x 215mm	580 x 415 x 190mm

Note :

1. This machine is intended for use at 220~240V/ 50Hz only
2. A suitable circuit protector (fuse, circuit breaker, etc.) should be located near the machine
3. Be certain cable is properly connected to voltage source
4. Do not place any hard objects on the grill. Do not slam the grill closed
5. Recommended temperature range for normal use is 200~250°C
6. The machine is intended for use where room temperature is below 45°F and humidity below 85%
7. Do not use caustic or abrasive products for cleaning.



OPERATING INSTRUCTIONS :

1. Be sure power cord is properly connected to a proper source (220~240V/ 50Hz)
2. Power indicator should indicate power available (light on)
3. Set to desired temperature (heating indicator will come on). Warm-up time is approximately 7-8 minutes. Heating indicator will cycle at set temperature
4. When set temperature is reached, lift top grill, using black handle, and lightly grease grill plates with vegetable oil. Place food on grill and lightly press handle down. Excess oil will collect in the grease collection tray. Remove food when cooked. The heating elements will automatically cycle as needed
5. Turn machine off when no longer needed and unplug from power source.

INSTRUCTIONS FOR FIRST TIME USE

In order to protect the plates of your new grill during transportation, a layer of food-safe oil was coated on the surface prior to shipment. This oil is harmless, but must be removed before you begin to use.

To remove, preheat the grill until the oil liquifies. Next, carefully wipe away the melted oil with a clean, soft cloth. Once all of the oil is removed you can begin to use your grill

CLEANING AND MAINTENANCE

1. Disconnect machine before cleaning and allow to cool.
2. Use only a damp towel with non-corrosive cleaner. Do not immerse or flush with water.
3. Wipe down outside surface to remove any soil.
4. Store in a dry clean area when not in use.



Attack tough grease, oil, and carbon with carbonizer and degreaser. Unique formula designed to clean ovens, grills, hoods and a wide variety of other surfaces.



TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	ACTION
Grill plates not heated when power and thermostat indicator are both on.	1. Temperature control broken. 2. At least one heating element broken. 3. Overheat thermostat is activated.	1. Replace temperature control. 2. Replace broken heating element. 3. Reset the overheat thermostat.
Temperature cannot be controlled when power is on, temperature controller is on and thermostat indicator on.	Temperature control is broken.	Defective controller
Indicator not on when power on and heating process normal.	Indicator is broken.	Replace
Power indicator not on when power on.	Defective fuse or open circuit breaker	Replace fuse or reset circuit breaker

Do not use the machine if any of the above occur.
Any troubleshooting corrections should be performed by a qualified technician.

 
DAILY CHECK

Before using the machine, visually inspect for any signs of damage or frayed power cord. Be certain machine is on a level counter top.

After turning it on, check for anything unusual before you use it.

Inspect the machine every day before using.

If there is any question about operation, do not use.

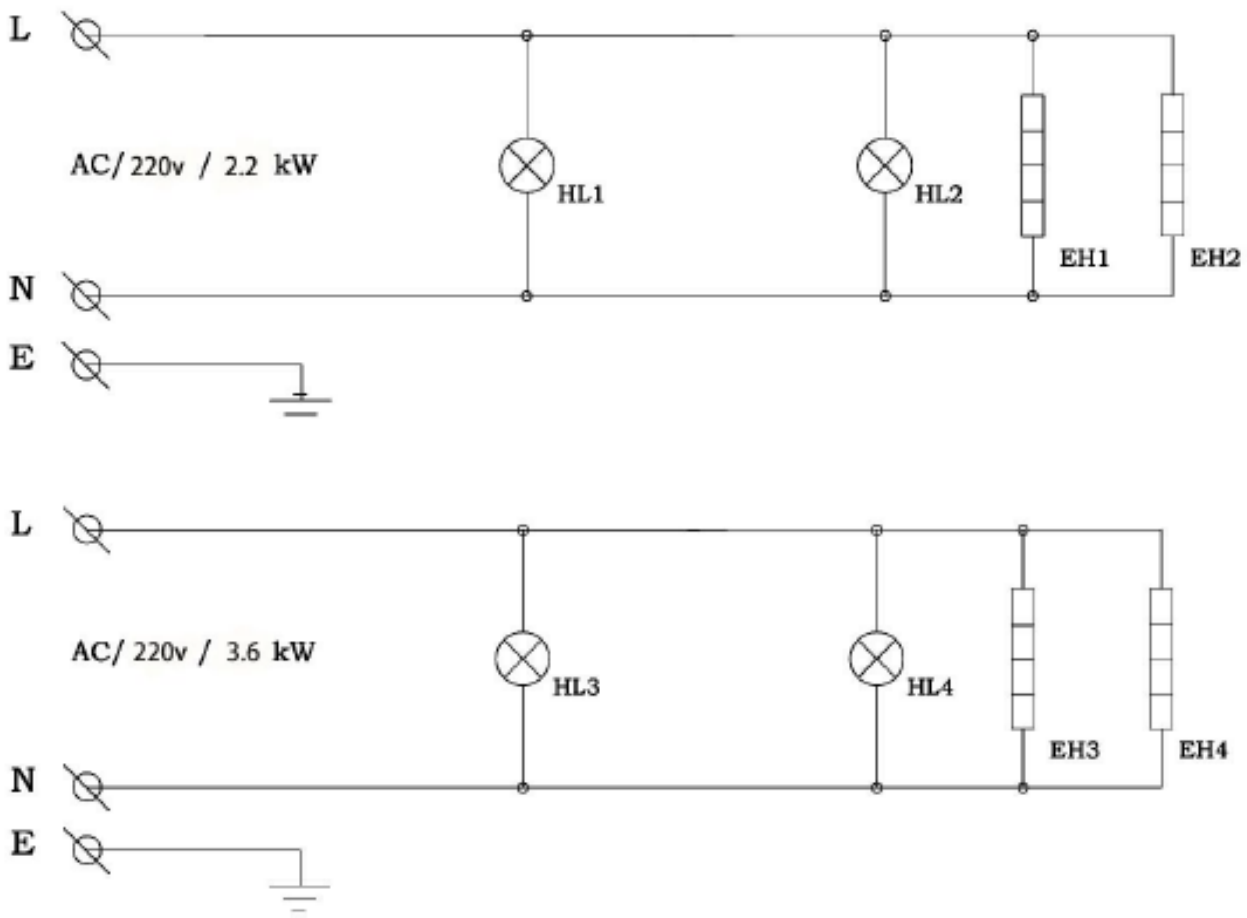

EH1-EH4 -----Heating Element
HL1-HL3-----Power Indicator
HL2-HL4-----Heating Indicator