


## INSTRUCTION FOR UTILITY CARTS

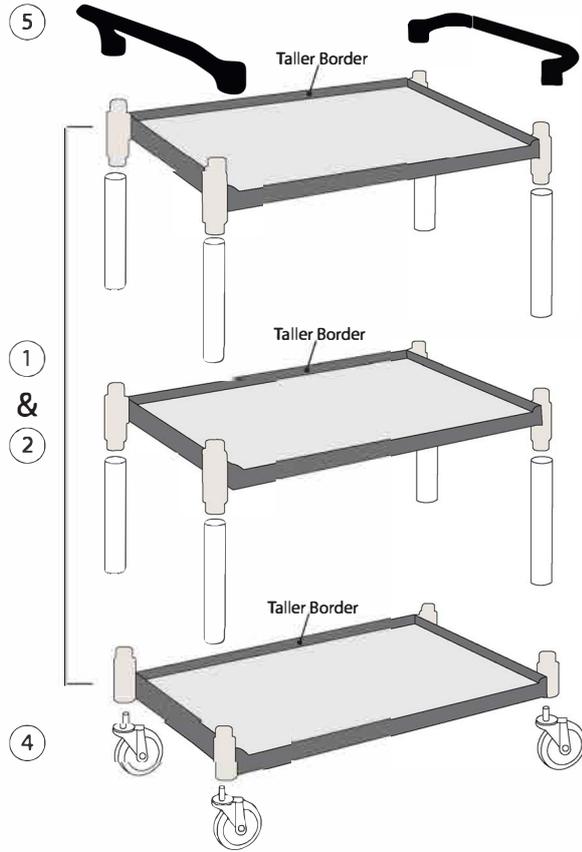

ACCESSORIES	AMOUNT
Shelf	3 pieces
Aluminum Posts	8 pieces
Casters	4 pieces
Handles	2 pieces

### Recommended Tool

1. Rubber/Plastic Hammer
2. Newspaper at least ¾" thick or 1¾" thick book, or a wooden board as padding.


### Before Assemble

- Identify the shelf for "Top, Middle & Bottom Shelf".
- Lining up the length with the taller border at the same side prior to assembling it.
- Assemble from "Bottom to Top", fixing the handles last.
- Lay padding when hammering the shelf, support or handle to ensure easy assembling.

### Assemble Instruction

- Step 1: Insert the aluminum post into the corner of the shelf.
- Step 2: Hammer in the aluminum post into the corners of the shelf in a circular movement. (Do not hammer in one post at a time.)
- Step 3: Repeat steps 1 and 2 until all 3 shelves are assembled.
- Step 4: Turn over the cart; insert casters into the corners of the shelf located underneath the bottom shelf. Hammer the wheels in.
- Step 5: Turn over the cart, assemble handles to the shelf.

## INSTRUCTIONS POUR LE CHARIOT DE SERVICE

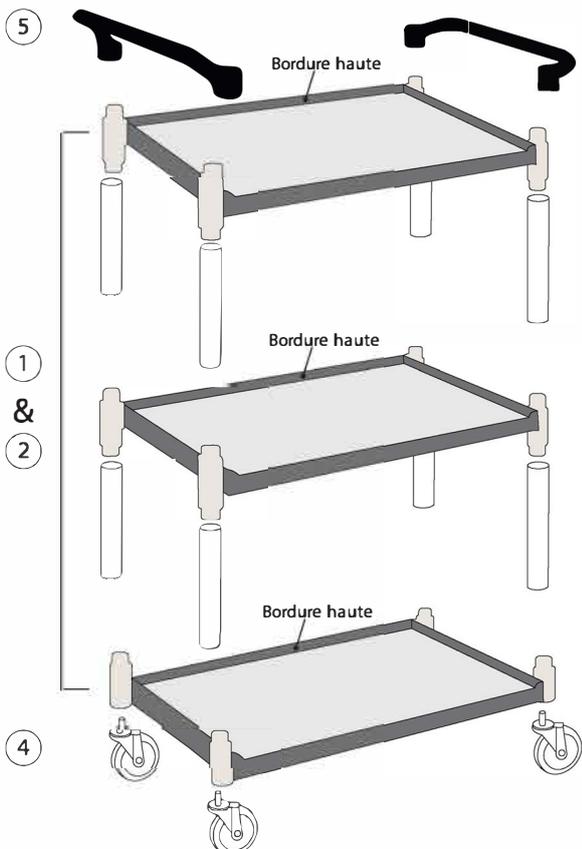

ACCESSOIRES	QUANTITES
Plateaux	3 pièces
Montants en Aluminium	8 pièces
Roulettes	4 pièces
Poignées	2 pièces

### Outil Recommandé

1. Marteau en caoutchouc ou en plastique
2. Journaux d'au moins ¾" d'épaisseur, ou un livre de 1¾" d'épaisseur, ou une planche en bois à utiliser comme protection

### Avant l'assemblage

- Identifier les plateaux pour l'« Étagère du haut, du milieu et du bas »
- Aligner la longueur avec le bord le plus haut du même côté avant de procéder à l'assemblage
- Assembler de « bas en haut », en fixant les poignées en dernier
- Utiliser une protection lorsque vous frappez les plateaux, supports ou poignées afin de faciliter l'assemblage

### Instructions d'assemblage

- Étape 1 : Insérez le montant en aluminium dans l'angle du plateau.
- Étape 2 : Enfoncez le montant en aluminium dans les coins du plateau en effectuant un mouvement circulaire. (Ne pas enfoncez un seul montant à la fois.)
- Étape 3 : Répétez les étapes 1 et 2 jusqu'à ce que les 3 plateaux soient assemblés.
- Étape 4 : Retournez le chariot ; insérez les roulettes dans les coins du plateau situé sous l'étagère inférieure. Enfoncez les roulettes à l'aide du marteau.
- Étape 5 : Retournez à nouveau le chariot et fixez les poignées sur le plateau.