

USER MANUAL DIPA

General features

- Power supply 230 Volts mono phased + ground rod
- Power 350 watts
- Fuse 2 Amp 5 x 20
- Max width of the roll..... 600 mm
- Dimensions..... Long = 650 Larg = 680 Height = 150 mm
- Weight..... Net = 11 Kilos Brut = 14 Kilos

Start up

- Connection to a 230 Volt mono socket (16 Amp)
- Press the switch, this one lights up.
- Heating time: about 15 minutes

Test

- Put the roll in place according to the drawing
- Unroll the film
- Put a tray on the inox tray
- Wrap it, passing the film on the top and engage it under the underside
- Pull the everthing towards you to cut the film on the edge of the hotplat
- Place the tray on the draw plate and pull the exess film from each side, then fold it under the underside. Seal the tray by placing the same face on the horizontal heating plate for a few seconds.

Maintenance

- Daily cleaning is necessary
- Clean with a slitly damp cloth
- Do not use abrasives to clean the teflon coating

In case of failure

- Check that the switch is live
- Check the condition of the fuse and if necessary, replace it
- Contact the after sales service of your supplier




ATTENTION




**RISK OF BURNS WITH THE HEATING PLATE
THAT HEATED PERMANENTLY**

Spare part list

REP	Code	Description	Qty
A	EL-1772	Power cord, moulded plug – lg 2.5 m – 3 x 0.75	1
B	FI-1718	PVC roll	2
C	TO-0016	Brake slab	1
D	FI-1372	Clamping wheel	1
E	FI-1306	Adhesive leg	4
F	EL-1404	Temporized fuse 5 x 20, 2 amp (x 10)	1
G	EL-1403	Fuse holder 5 x 20	1
H	EL-1512	2-way switch 22 x 30	1
I	TO-1815	Teflon heating plate	1
J	EL-1717	Resistor 350 W	1

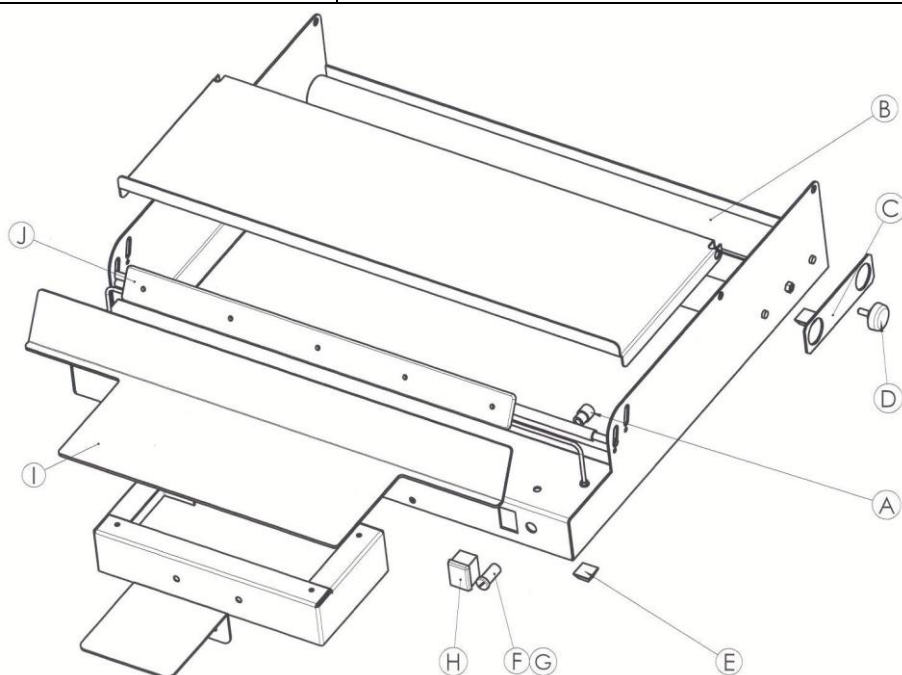

Electrical diagram

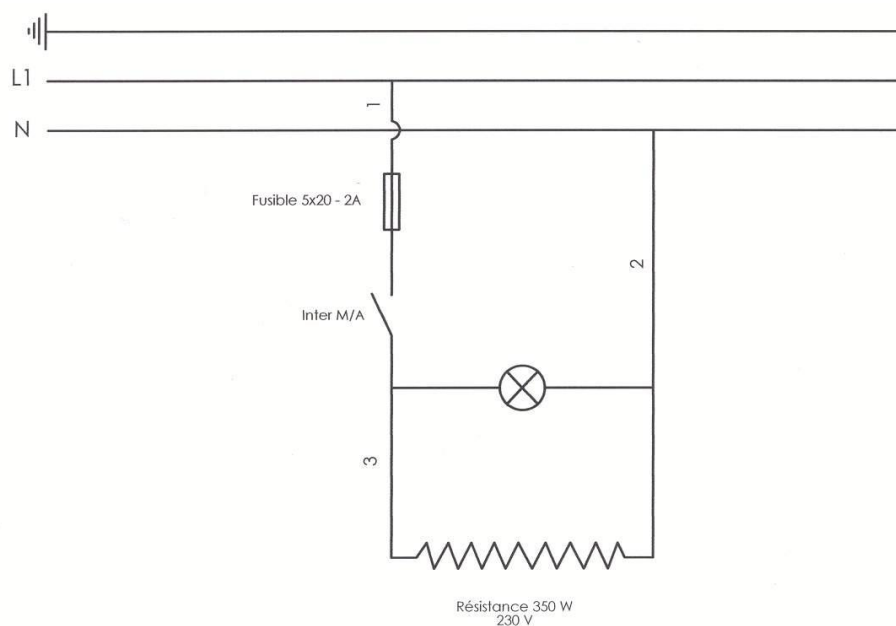

Manuel d'utilisation DIPA

Caractéristiques générales :

Alimentation : 230 V monophasé + prise de terre

Puissance : 350 W

Fusible : 2 Amp 5x20

Largeur maximale du rouleau : 600 mm

Dimensions : 650x680x150 mm

Poids : 11 Kg net – 14 Kg brut

Mise en marche :

Raccorder à une prise monophasée 230 V (16 Amp)

Appuyer sur l'interrupteur, le voyant s'allume

Temps de chauffe : environ 15 minutes

Test :

Mettre le rouleau en place selon le schéma

Dérouler le film

Placer un plateau sur le plateau en inox

Enrouler le film, en le faisant passer sur le dessus et en l'engageant en dessous

Tirer l'ensemble vers vous pour couper le film sur le bord de la plaque chauffante

Placer le plateau sur le tiroir et tirer l'excédent de film de chaque côté, puis le replier en dessous. Sceller le plateau en plaçant la même face sur la plaque chauffante horizontale pendant quelques secondes

Entretien :

Un nettoyage quotidien est nécessaire

Nettoyer avec un chiffon humide légèrement essoré

Ne pas utiliser d'abrasifs pour nettoyer le revêtement en téflon

En cas de panne :

Vérifier que l'interrupteur est sous tension

Vérifier l'état du fusible et, si nécessaire, le remplacer

Pièces détachées et vue éclatée :

REP	Code	Description	Qté
A	EL-1772	Cordon d'alimentation, prise moulée – Lg 2,5 m – 3 x 0,75	1
B	FI-1718	Rouleau PVC	2
C	TO-0016	Plaque de frein	1
D	FI-1372	Roue de serrage	1
E	FI-1306	Pied adhésif	4
F	EL-1404	Fusible temporisé 5 x 20, 2 ampères (x10)	1
G	EL-1403	Porte-fusible 5 x 20	1
H	EL-1512	Interrupteur bipolaire 22 x 30	1
I	TO-1815	Plaque chauffante en téflon	1
J	EL-1717	Résistance 350 W	1

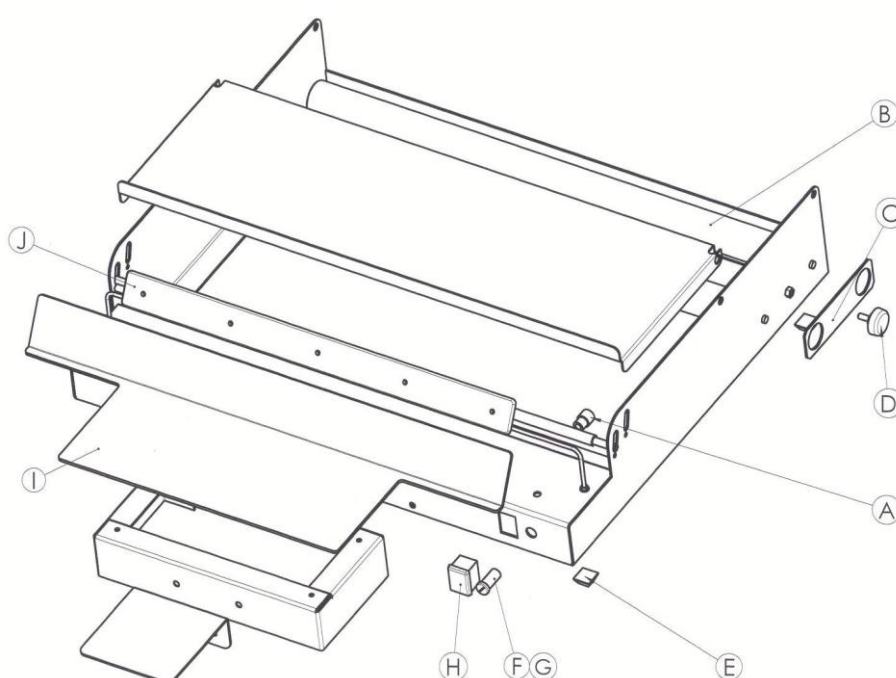


Schéma électrique :

